



DIRENZA
PROVEN PERFORMANCE

FITTING GUIDE

Volkswagen Golf MK7 R

The Direnza VW Golf MK7 R Cold Air Kit is a high performance, after-market induction system. Offering increased airflow and performance over the stock air filter setup. The extra air capacity provides the engine with more oxygen resulting in power gains and a great induction noise.

DISCLAIMER

- Allow the vehicle to cool completely prior to installation.
- We recommend that the Air Kit is installed by a professional.
- Direnza is not responsible for any vehicle damage or personal injury due to installation errors, misuse or removal of Direnza products.

TOOLS REQUIRED

- Allen Key
- Flathead Screwdriver

1x Air Filter
1x Hardpipe
1x Metal Airbox
1x Hardpipe Support Bracket
1x Bobbin Mounting Bracket
1x Silicone Reducer

1x Edging Trim
3x Bobbins
3x Jubilee Clips
6x Allen Bolts
7x Washers
1x Allen Key






1. Open the bonnet.



2. Remove the engine cover.




3. Undo jubilee clip on the OEM throttle body intake pipe.

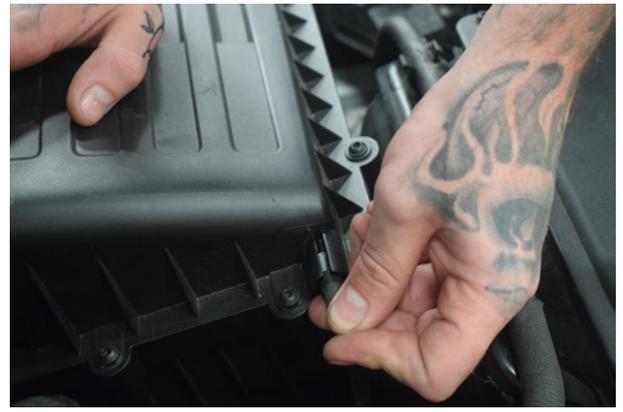

4. Remove the breather pipe.



5. The OEM airbox can now be lifted from its mounting points.

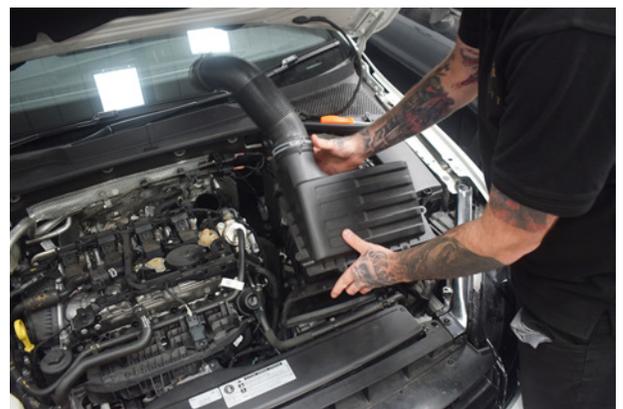

6. Remove the airbox assembly.



7. Locate 1x bobbin and mounting bracket in the Direnza Kit.




8. Install the bobbin into the bracket and install on the Direnza air box.




9. Step 9 continued.



10. Install and tighten supplied bolts to fix the bracket/bobbin to the airbox.

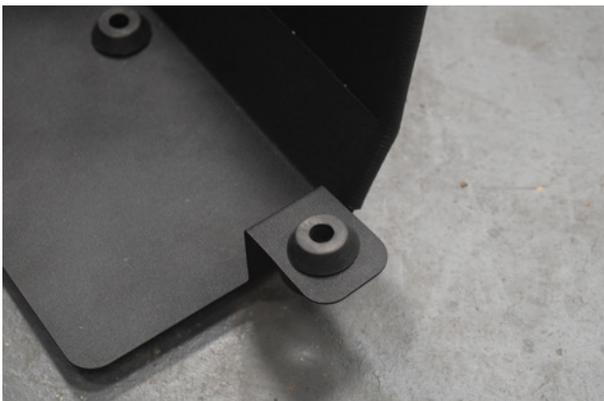


11. Install the remaining 2x bobbins in the airbox.

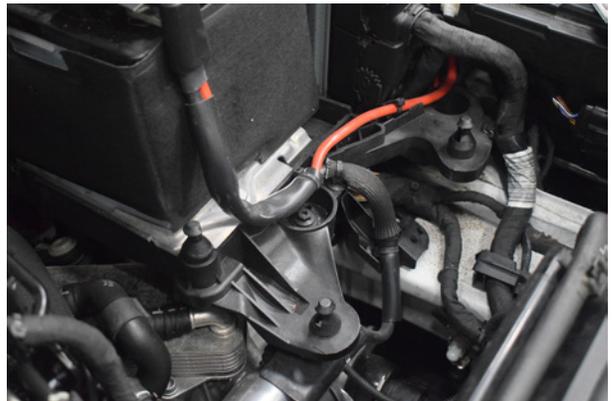

12. The three bobbins fit onto the OEM mounting points.




13. Install the edging trim before placing the airbox into position.

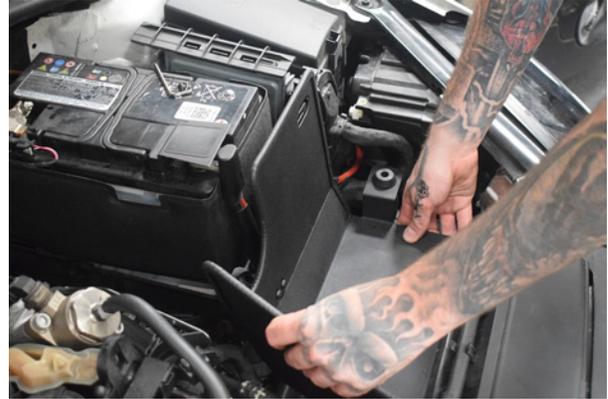

14. Push down to secure the bobbins into their mounting points.



15. When installing the hard pipe support bracket, ensure the washers are positioned like this.

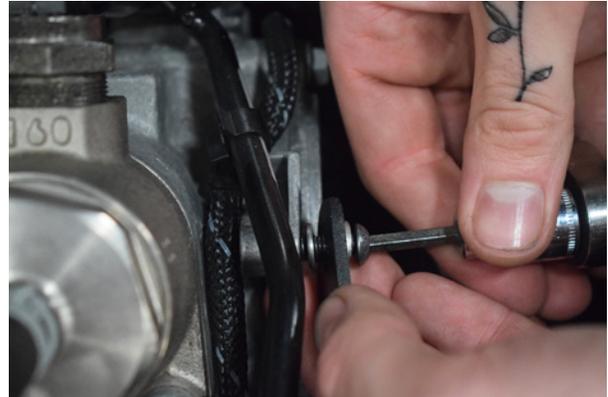

16. Loosely fix the bracket into position.




17. Step 17 continued.



18. Install the silicone reducer and 2x jubilee clips on the throttle body end of the hard pipe.



19. Install over the throttle body.

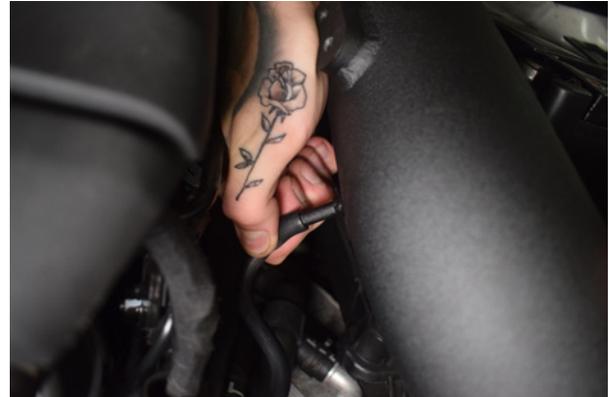


20. Install the breather pipe on to the new hard pipe.



21. Once in position you can secure the support bracket to the hard pipe.



22. You can now fully tighten the lower support bracket bolt.

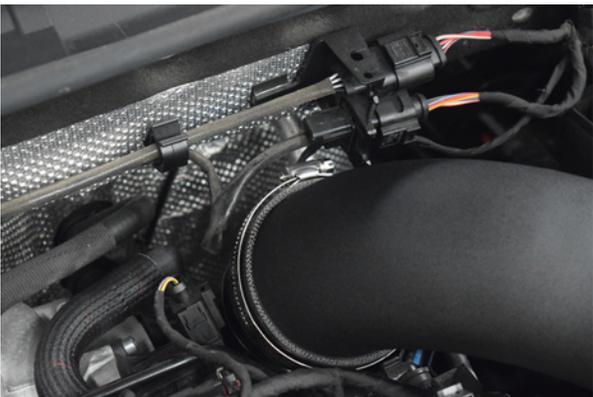

23. Tighten the jubilee clip on the throttle body inlet.



24. Place filter onto the opposite end of the hard pipe.



25. Tighten the Jubilee using a Flat Screwdriver, ensuring not to over tighten.



26. You are now ready to install the engine cover.



27. Re-install the engine cover.



28. Your new Direnza Air Induction Kit is now installed.



You may also like...



VW Golf MK7 R Aluminium
Auxiliary Radiator YARA049.



VW Golf MK7 R Performance
Radiator DZRA093.



VW Golf MK7 R MVT
Intercooler GPIC028.



VW Golf MK7 R 20mm Lowering
Springs DIRSP-02332.



15mm, 20mm & 25mm Wheel Spacers WSVW04 05 & 06.



VW Golf MK7 R Nearside & Offside Engine Mounts AMEM032 AMEM031.

THANKS FOR YOUR ORDER!

We really appreciate you choosing Direnza Performance for your recent purchase.

We are always looking to feature your cars on our Social Media. As a result, we are asking you to **tag and follow** us so we can keep the community growing! **@DIRENZAPERFORMANCE**

#DIRENZA #DIRENZAPERFORMANCE

